



BIOSOFT MEGABULLET™ DISPENSER-500 PAIRS - SOLD EMPTY.

- The PIP 267-HPDBSF-500E earplug dispenser is designed to accommodate Biosoft Méga Bullet™ uncorded earplugs.
- With a simple turn of the dispensing lever, it releases one earplug at a time directly into the hand.
- Refill the dispenser using our BSF-1B earplug refill pack.
- Allows controlled use of earplugs and improved hygiene.
- Reduces packaging waste.
- Refilling the dispenser is very easy.
- Can hold up to 500 pairs of earplugs.
- Sold separately, without earplugs.

EAR PLUGS USER INSTRUCTIONS

- Earplugs should always be worn in noisy environments and should be inserted before entering the noisy area.
- These earplugs are disposable, but when not in use, they should be stored in a clean, dry place.

TECHNICAL DATA

| | |
|-------------------|---|
| PACKAGING | 1 Dispenser by box, 2 dispensers by case. |
| CASE DIMENSIONS | 44,5 × 42 × 34 cm |
| CASE WEIGHT | 2 Kg |
| COUNTRY OF ORIGIN | China |

REFILL PACK: BSF-1B



STANDARDS AND APPROVALS

PIP earplugs comply with the European standards EN 352-2: 2020. They meet the essentials safety requirements defined in Regulation (EU) 2016/425.

ATTENUATION DATA


| FREQUENCY HZ | 125 | 250 | 500 | 1000 | 2000 | 3150 | 4000 | 6300 | 8000 |
|-----------------------|------|------|------|------|------|------|------|------|------|
| Mean attenuation dB | 40,3 | 39,8 | 41,9 | 40,6 | 39,7 | 45,1 | 46,6 | 47,8 | 47,2 |
| Standard deviation dB | 5,5 | 5,4 | 5,8 | 3,8 | 2,6 | 4,1 | 3,7 | 3,5 | 4,5 |

| | |
|-----|----|
| SNR | 38 |
| H | 37 |
| M | 36 |
| L | 35 |


USER INSTRUCTIONS




1
Lay out all 3 pieces of the dispenser (base, support, canister).

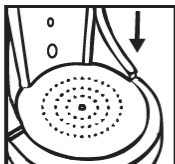

2
Lay base flat and insert support into slot.

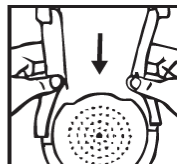

3
Hold base in place and push support into place by applying pressure on left and right side base.

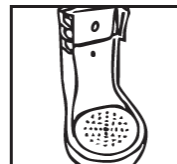

4
Keep the base and support in a upright position.



5
Insert back of canister into slots at top of support.



6
Slide canister into slots until firmly in place.



7
Place dispenser on table top for use.

BioSoft™

SUSTAINABLE BIO-BASED TECHNOLOGY



GREEN HEART®